

## Digital Still Cameras - Lens Compatibility Chart

DIGITAL CAMERA MODEL	Required Lens Mount	Required Step Ring	0.65 Wide Angle	0.65 2.0X Telephoto	+8 Close-Up	1.3x Telephoto	Item #:02010 0.7x Wide Angle	+18 Close-Up	Item #: 00190 2x Telephoto 37mm threads	Item #: 00191 .56x Wide Angle 37mm threads	Item #: 02005 Close-Up +7, +10	Item #: 00195 2x Telephoto 43mm threads	Item #: 00196 .75x Wide Angle 43mm threads	Item #: 02006 Close-Up +7, +10
<b>AGFA</b>														
ePhoto CL45, CL34	AGCL34AD	-				X	X	X						
ePhoto CL30/CL30 Click!	-	-									X			
<b>CANON</b>														
PowerShot G2, G1, G2 (Black)	CANG1AD	-								X		X	X	X
PowerShot A20, A10	CANA20AD	-								X	X			
<b>CASIO</b>														
QV-2900DX, QV-8000SX	-	-											X	X
<b>EPSON</b>														
PhotoPC 3100Z, 3000Z	included	4943AD										X	X	X
PhotoPC 850Z	included	4943AD										X	X	X
PhotoPC 800	EP800AD	-									X			
<b>FUJIFILM</b>														
DS-260HD	-	-												X
FinePix F602Z	FUJI4900AD	-										X	X	X
FinePix 6900Z, 4900Z	FUJI4900AD	-											X	X
FinePix 6800Z, 4800Z	FUJI4800AD	-							X	X	X			X
<b>HEWLETT PACKARD</b>														
Photosmart 320	HP320AD	-											X	
Photosmart 850	HP850AD	-											X	X
Photosmart 912	-	4943AD										X	X	X
Photosmart 812	HP812AD	-							X	X	X			
Photosmart 720	-	-							X					
Photosmart 715	HP715AD	-										X	X	X
Photosmart 620	-	-							X					
Photosmart 618	HP618AD	-							X	X	X			
Photosmart 612	HP612AD	-												
Photosmart 318	HP318AD	-				X	X	X						
Photosmart 315	HP315AD	-				X	X	X						
Photosmart 215, 210	HP215AD	-				X	X	X						
PhotoSmart C500	-	-									X			
PhotoSmart C200, C30, C20	HPC200AD	-								X	X			
<b>KODAK</b>														
Dx4900	DX3900AD	-							X		X		X	
	DX3900AD	3743SUR							X		X		X	
Dx3900	DX3900AD	-							X		X		X	
	DX3900AD	3743SUR							X		X		X	
Dx3600	DX3600AD	-							X		X		X	
	DX3600AD	3743SUR							X		X		X	
Dx3500	DX3500AD	-							X	X	X		X	
Dc4800	TIF4800AD	4337AD							X		X		X	
Dc5000	-	-									X		X	
	-	3743SUR									X		X	
Dc3400	DC240AD	-							X	X	X		X	
Dc290, DC265, DC260	DC265AD	-							X	X	X		X	
	DC240AD	-							X		X		X	
Dc280	DC240AD	3743SUR							X		X		X	
Dc240, DC240i	DC240AD	-							X	X	X		X	
Dc215	DC215AD	-									X		X	
	DC210AD	-									X		X	
Dc210, DC210 Plus	DC210AD	3743SUR									X		X	
<b>NIKON</b>														
COOLPIX 995, 990, 950, 900, 800	NIKON900AD	-							X	X	X		X	
COOLPIX 880	NIK880AD	-							X	X	X		X	
OLYMPUS	-	-												
C-4040Z, 3040Z, 3030Z, 3020Z, C-2100UZ, E-100RS	OLYC3000AD	-										X	X	X
	-	4943AD										X	X	X
C-2500L, D-620L, D-600L, D-500L C-700UZ	OLYC700AD	-										X	X	X
	OLYD490AD	-							X		X		X	X
D-490Z, 460Z, 450Z, 400Z	OLYD490AD	3743SUR									X		X	
D-360L, 340L, 320L	OLYM340AD	3743SUR								X	X		X	
C-211Z	OLY211AD	-										X	X	X
<b>PENTAX</b>														
Optio 430, 330	PEN330AD	-							X	X	X		X	
EL-2000	-	4943AD										X	X	X
EL-200	HP618AD	-							X	X	X		X	
<b>POLAROID</b>														
PDC-1300, PDC-1100	HP215AD	-				X	X	X						
<b>RICOH</b>														
6000	RDC6000AD	-	X	X	X									
<b>SONY</b>														
Mavica MVC-CD400, CD300	SONYS70AD	-										X	X	X
Mavica MVC-CD250, CD200	-	-							X	X	X		X	
Mavica MVC-FD75, FD73, FD71	-	-							X	X	X		X	
Mavica MVC-FD85, FD83, FD81	-	-							X	X	X		X	
Mavica MVC-FD90, FD88, FD87	-	-							X	X	X		X	
Mavica MVC-FD92	-	-							X	X	X		X	
Cyber-shot DSC-P30, P50	-	-							X	X	X		X	
Cyber-shot DSC-S30, S50	-	-							X	X	X		X	
Cyber-shot DSC-S85, S75, S70	SONYS70AD	-										X	X	X
Cyber-shot DSC-F505V, F505	-	5243AD										X	X	X
<b>TOSHIBA</b>														
PDR-2300	TOSH2300AD	-										X	X	X
PDR-3300	TOSH3300AD	-										X	X	X
PDR-3320	TOSH3320AD	-										X	X	X
PDR-M81, M71	TOSH81AD	-									X	X	X	X
PDR-M70	TOSH70AD	-									X	X	X	X
PDR-M65, M61	TOSH65AD	-									X	X	X	X
PDR-M60	TOSH60AD	-									X	X	X	X
PDR-M25	TOSH25AD	-								X	X	X	X	X
PDR-M5	TOSH5AD	-									X	X	X	X